




Eco-Smart LED Retrofit for HID Lighting

Installation Instructions HTS Series Retrofit Kits

SAFETY WARNING! All HTS Retrofit Kits should be installed by Qualified Personnel familiar with safe electrical practices. Lock out, tag out procedures should be observed.

Typical Flush Mounted Canopy Installation

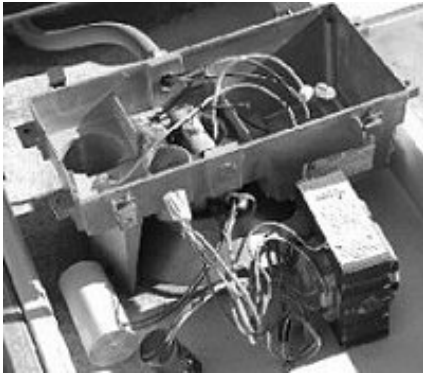

1. After insuring that all circuits are safe, remove ballast cover, disconnect leads, safe off with wire nuts.

2. Cut socket wires loose, remove ballast and remove socket mounting screws.

3. Loosen lens and drop down on hinges.

4. Clean lens and remove bulb and reflector.



5. Deposit bulb in container provided.

6. Feed wires through socket hole and secure kit using screws provided.

7. Close lens frame.

8. Attach Power Supply wires to kit wires in ballast compartment. Then attach feed wires to power supply.

9. Test for proper operation.

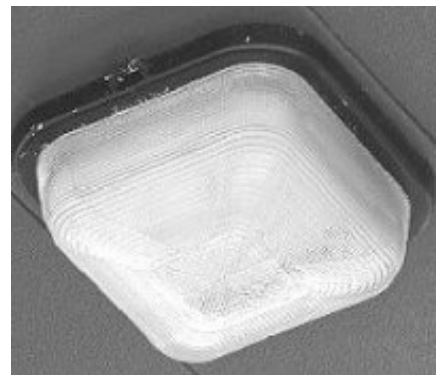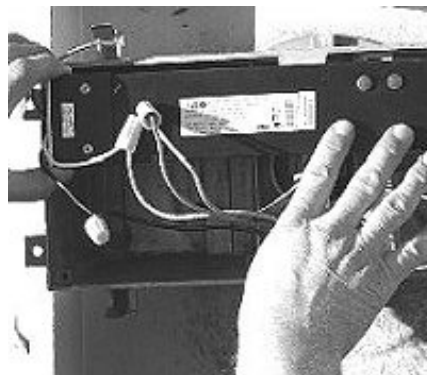

Eco-Smart, Inc.

(888)329-2705 info@eco-smart.com www.eco-smart.com